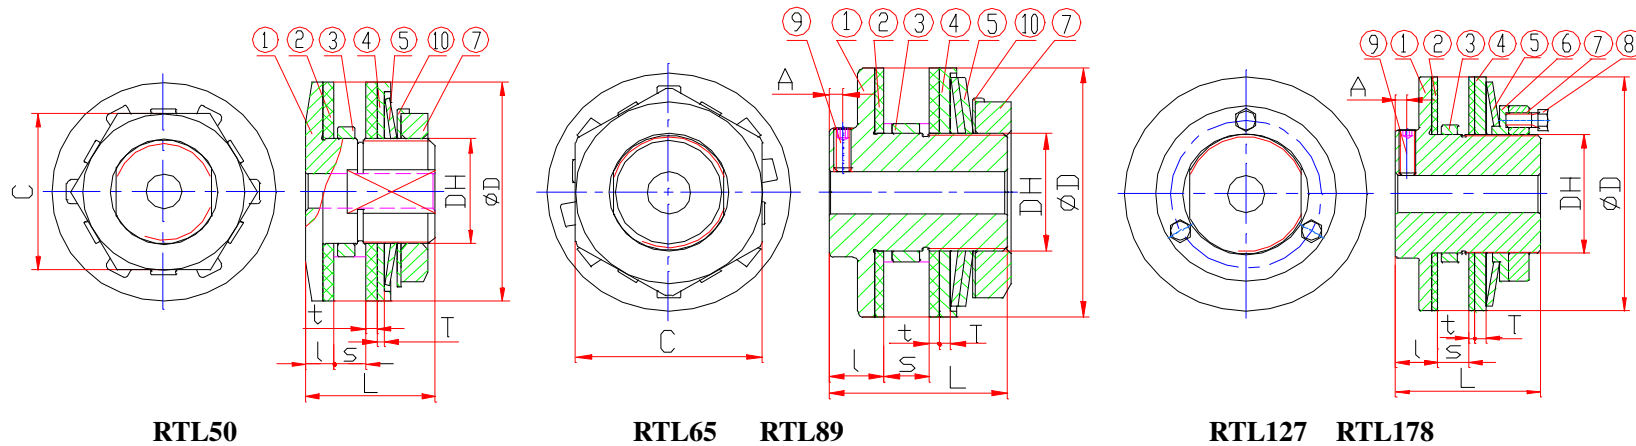


**Dimensions and Capacity for RTL50 to RTL178**

Size	Torque Range (Nm.)	Plain Bore	Max. Bore	Bush Length	O.D. of Bush	Bore for Center Member	D	DH	L	l	T	t	S (Max)	A	C	Adjust. Nut	Adjust. Bolt	Set Screw	Weight (kg)
RTL50-1	2.9 ~ 9.8	8	14	3.8	-0.020	+0.033	50	24	29	6.5	2.6	2.5	7	-	36	M24	-	-	0.248
RTL50-2	6.9 ~ 19.6			6	-0.041	0										P1.0			0.256
RTL65-1	6.9 ~ 27.5	10	22	6	-0.025	+0.039	65	35	48	16	4	3.2	9	4	50	M35	-	M5	0.721
RTL65-2	13.7 ~ 54.0			8	-0.050	0										P1.5			0.739
RTL89-1	19.6 ~ 74.6	17	25	6	-0.025	+0.039	89	42	62	19	4	3.2	16	5	65	M42	-	M6	2.417
RTL89-2	34.3 ~ 149.1			8 9.5 14.5	-0.050	0										P1.5			2.477
RTL127-1	47.1 ~ 209.9	20	42	6	-0.030	+0.046	127	65	76	22	6	3.2	16	6	-	M65	M8 P1.0 3pcs	M8	3.692
RTL127-2	88.3 ~ 420.8			8 9.5 14.5	-0.060	0										P1.5			3.858
RTL178-1	115.8 ~ 570.0	30	64	8	-0.036	+0.054	178	95	98	24	7	3.2	29	6.5	-	M95	M10 P1.25 3pcs	M10	9.033
RTL178-2	223.7 ~ 1,088.9			9.5 17 22	-0.071	0										P1.5			9.436

Name of parts:

- ① Hub
- ② Friction Facing
- ③ Bushing
- ④ Pressure Plate
- ⑤ Disc Spring
- ⑥ Pilot Plate
- ⑦ Adjustment Nut
- ⑧ Adjustment Bolt
- ⑨ Set Screw
- ⑩ Lock Washer