


**เวอร์ทัส
VIRTUS**

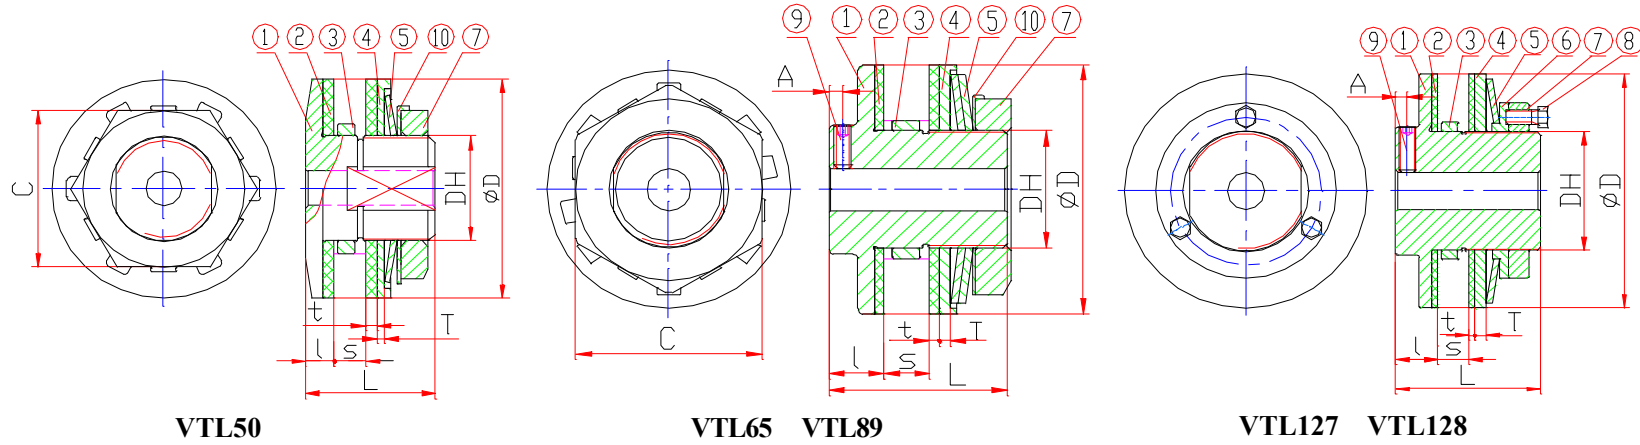

Dimensions and Capacity for VTL50 to VTL178

Size	Torque Range (Nm.)	Plain Bore	Max. Bore	Bush Length	O.D. of Bush	Bore for Center Member	D	DH	L	l	T	t	S (Max)	A	C	Adjust. Nut	Adjust. Bolt	Set Screw	Weight (kg)
VTL50-1	2.9 ~ 9.8	8	14	3.8	30 -0.020	30 +0.033	50	24	29	6.5	2.6	2.5	7	-	36	M24	-	-	0.248
VTL50-2	6.9 ~ 19.6			6	30 -0.041	30 0										0.256			
VTL65-1	6.9 ~ 27.5	10	22	6	41 -0.025	41 +0.039	65	35	48	16	4	3.2	9	4	50	M35	-	M5	0.721
VTL65-2	13.7 ~ 54.0			8	41 -0.050	41 0										0.739			
VTL89-1	19.6 ~ 74.6	17	25	6	49 -0.025	49 +0.039	89	42	62	19	4	3.2	16	5	65	M42	-	M6	2.417
VTL89-2	34.3 ~ 149.1			8															49 -0.050
VTL127-1	47.1 ~ 209.9	20	42	6	74 -0.030	74 +0.046	127	65	76	22	6	3.2	16	6	-	M65	M8	M8	3.692
VTL127-2	88.3 ~ 420.8			8															74 -0.060
VTL178-1	115.8 ~ 570.0	30	64	8	105 -0.036	105 +0.054	178	95	98	24	7	3.2	29	6.5	-	M95	M10	M10	9.033
VTL178-2	223.7 ~ 1,088.9			9.5															105 -0.071

Name of parts:

- ① Hub
- ② Friction Facing
- ③ Bushing
- ④ Pressure Plate
- ⑤ Disc Spring
- ⑥ Pilot Plate
- ⑦ Adjustment Nut
- ⑧ Adjustment Bolt
- ⑨ Set Screw
- ⑩ Lock Washer